

Data Sheet: Cryogenic Gaiters

- **Manufactured in England using the same materials as our gloves, aprons and suits.**
- **Superb insulation, needs less thickness giving more manoeuvrability.**
- **Protect the lower legs and feet against spills and splashes from cryogenic materials.**

The Cryogenic Gaiters offer the same technology and Category III protection as that of the cryogenic gloves and suits. CE/UKCA certified as per Aprons.

Cryogenic Gaiters offer a multi-layer protection to the lower leg and top of the feet from extremely cold temperatures, both in cold atmospheres and from transmission of cold through direct contact with cold objects.

The Gaiters offer protection from cryogenic vapours ranging from -120° C to -190° C.

The outer layer of woven polyamide has a waterproof coating to resist condensed water on cold surfaces, yet it remains permeable to vapour. An extremely thin, yet durable state of the art membrane is incorporated into the gaiters.

The insulation layer is of special polyolefin/polyester micro-fibre, which is almost twice as effective in thermal insulation as a similar thickness of down. The inner layer consists of a breathable cotton, ensuring comfortable wear.


Cryogenic gaiters are a universal size to cover a wide range of closed shoes, or boots.

Velcro fasteners are adjustable to ensure a good fit.



Care Instructions: Store in a clean dry space. Do not machine wash or dry.

EN388

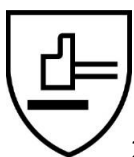

2X2XX

EN511



22X

UK
CA

CE



Wolflabs

Wolf Laboratories Limited

www.wolflabs.co.uk

Tel: 01759 301142

Fax: 01759 301143

sales@wolflabs.co.uk



Use the above details to contact us if this literature doesn't answer all your questions.

Pricing on any accessories shown can be found by keying the part number into the search box on our website.

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

