



Product Code: EP700G 41-153

Single door glass refrigerator cabinet



The EcoPro G3 range of cabinets offers a combination of cutting-edge refrigeration technology, low running costs and reliability, making them the first choice for the foodservice professional.

Features & Benefits

- Foster Shield provides advanced temperature control and hygienic design, protecting from the dangers of unsafe food storage. With air distribution optimised by CFD design technology, efficient operation is assured, even when shelves are fully loaded
- With PureControl, the G3's controller display uses pure LEDs, incorporating InGaN technology, which means it achieves higher resolution, lasts longer - all while using less power. Through the simple addition of a gateway, you're connectivity-ready
- Fitted with our new and improved +stayclear condenser which helps increase product life and reduce energy consumption, +stayclear helps your low energy fridge stay a low energy fridge. Now fitted across the cabinet and counter range as standard
- Market leading usable capacity, now supplied with 4 shelves as standard making your money go further – holds more than a conventional fridge
- Supplied with glass door for optimum visibility of stored product
- This glass door model uses energy efficient LED lighting to enhance the display of stored products
- Operates efficiently in ambient temperatures of up to 32°C (ISO Climate class 4)

Shelving

Extra heavy duty shelving	Option
4 shelves (GN2/1)	Standard

Refrigeration

R290 - Energy Efficient	Standard
Integral Refrigeration System	Standard
Less Condensing Unit	Option

Specification

Gross volume (ltrs)	600
Refrigerator +1/+4°C	Standard
Width (mm)	700
Depth (mm)	855
Height (mm)	2080

Base Fittings

Castors 80mm	Standard
Legs 150mm	Option

Electrical & Service Data

230/50/1	Standard
Fuse Required (A)	10

Finish

s/steel ext, 304 s/s door & alu int	Standard
304 S/S back for island sitting	Option

Doors

Glass	Standard
--------------	----------


Product Extras

Helicoil Mains Lead	Option
----------------------------	--------

Footnotes

- Castors not available if product supplied less condensing unit
- Adequate airflow and service space must be kept above the top of cabinet: 100mm
- Depth with door open is 1500mm

Energy Performance Data and information

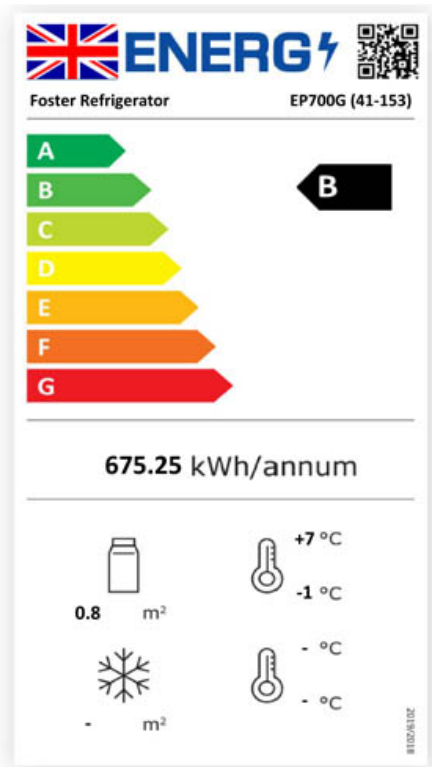

Application


This appliance is intended for use in ambient temperatures up to 40°C

Safety

Precautionary instructions and maintenance advice, to ensure efficient operation, can be found in this products operating instructions.

Recycling

For recycling and end of life care for this product, please refer to environmental section of the website or visit [our policies](#)

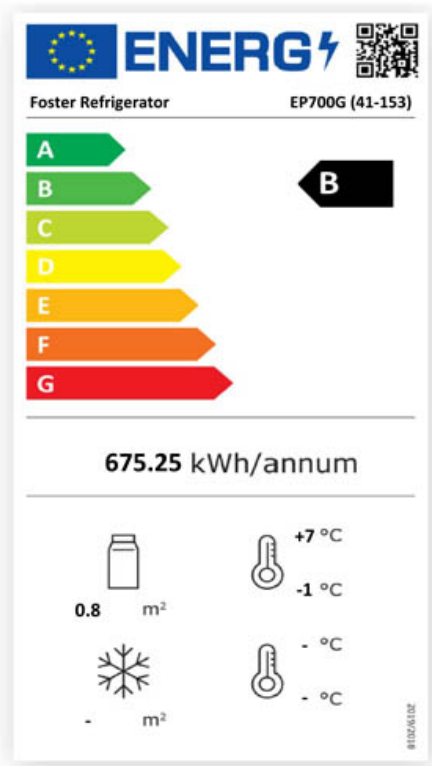

The Refrigeration Experts

All images shown are for illustration purpose only. All images and photographs are not intended to be relied upon for, nor to form part of, any contract unless specifically incorporated in writing into the contract. Solely the dimensions and specifications incorporated in the quotation or purchase order confirmation shall be contractually binding.



WolfLabs

Pricing on any accessories shown can be found by keying the part number into the search box on our website.

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

www.wolflabs.co.uk

Tel : 01759 301142

Fax : 01759 301143

sales@wolflabs.co.uk

Please contact us if this literature doesn't answer all your questions.