



Product Code: EP820HU 41-221

Single door Broadway refrigerator cabinet



The EcoPro G3 range of cabinets offers a combination of cutting-edge refrigeration technology, low running costs and reliability, making them the first choice for the foodservice professional.

Features & Benefits

- Foster Shield provides advanced temperature control and hygienic design, protecting from the dangers of unsafe food storage. With air distribution optimised by CFD design technology, efficient operation is assured, even when shelves are fully loaded
- With PureControl, the G3's controller display uses pure LEDs, incorporating InGaN technology, which means it achieves higher resolution, lasts longer - all while using less power. Through the simple addition of a gateway, you're connectivity-ready
- Fitted with our new and improved +stayclear condenser which helps increase product life and reduce energy consumption, +stayclear helps your low energy fridge stay a low energy fridge. Now fitted across the cabinet and counter range as standard
- Market leading usable capacity, now supplied with 4 shelves as standard making your money go further – holds more than a conventional fridge
- This model offers GN 2/1 compatibility in a reduced depth format with wide opening door
- High quality 304 stainless steel is used as standard on all doors and unit covers for G3 – the gold standard in performance stainless steel – meaning the heaviest usage touchpoints on the product are covered
- Providing an alternative format for kitchens with higher ambient temperatures, the bottom mounted refrigeration system takes cooler air from floor level

Shelving

Extra heavy duty shelving	Option
4 shelves (GN2/1)	Standard

Refrigeration

R290 - Energy Efficient	Standard
Integral Refrigeration System	Standard
Less Condensing Unit	Option

Specification

Refrigerator +1/+4°C	Standard
Width (mm)	820
Depth (mm)	745
Height (mm)	1980
Gross Volume (Ltr)	600

Base Fittings

Castors 80mm	Standard
Legs 150mm	Option

Electrical & Service Data

230/50/1	Standard
Fuse Required (A)	10

Finish

s/steel ext, 304 s/s door & alu int	Standard
304 S/S back for island sitting	Option

Doors

Solid	Standard
--------------	----------

Product Extras

Helicoil Mains Lead	Option
----------------------------	--------


Energy

AEC	891
Nett Volume	411.7
Energy Grade	D
Energy Efficiency Index	69.35

Footnotes

- Operates efficiently in ambient temperatures of up to 43°C
- Castors not available if product supplied less condensing unit
- Adequate airflow and service space must be kept above the top of cabinet: 100mm
- Depth with door open is 1500mm

Energy Performance Data and information

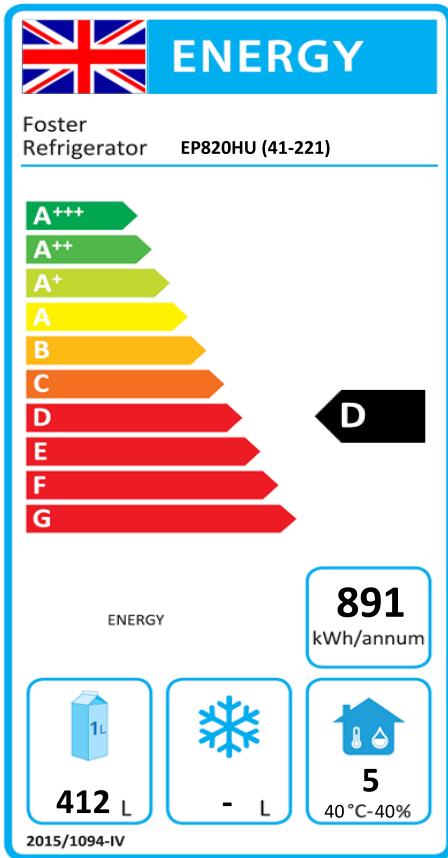

Application


This appliance is intended for use in ambient temperatures up to 40°C

Safety

Precautionary instructions and maintenance advice, to ensure efficient operation, can be found in this products operating instructions.

Recycling

For recycling and end of life care for this product, please refer to environmental section of the website or visit [our policies](#)

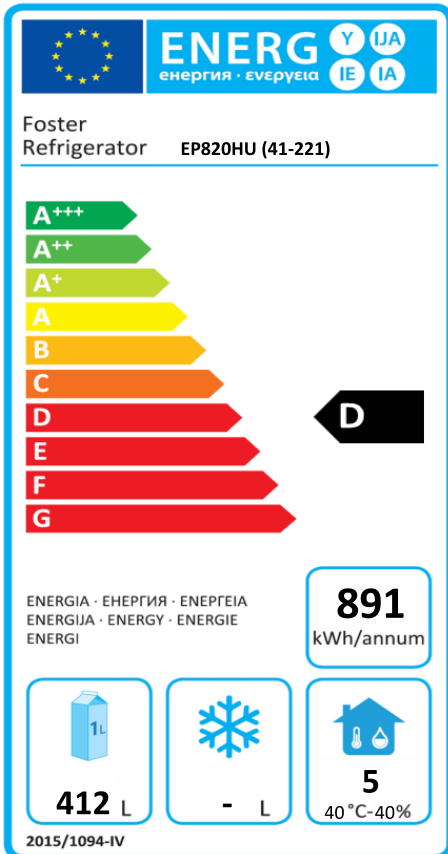

The Refrigeration Experts

All images shown are for illustration purpose only. All images and photographs are not intended to be relied upon for, nor to form part of, any contract unless specifically incorporated in writing into the contract. Solely the dimensions and specifications incorporated in the quotation or purchase order confirmation shall be contractually binding.



WolfLabs

Pricing on any accessories shown can be found by keying the part number into the search box on our website.

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

www.wolflabs.co.uk

Tel : 01759 301142

Fax : 01759 301143

sales@wolflabs.co.uk

Please contact us if this literature doesn't answer all your questions.