


## SPECIFICATIONS

Display:	Triple 4 digit LCD.
Over Range Indication:	OL - appears.
Low Battery Indicative:	<b>BT</b> shows up when tire battery's voltage below the operating voltage.
Sampling Rate :	about 1 time per second
Power Requirement:	6pcs 1.5V size AAA alkaline batteries or 9V AC Adaptor / 500mA minimum.
Battery Life:	Approx. 90 hours. (Interval printing = 60 minutes, excluding beeper). 160 hours (without printing & beeper).
Printing Interval:	6 sec to 59 min 59 sec
Operating Temperature and Humidity:	0 to 50°C (32 to 122°F) below 95% RH
Storage Temperature and Humidity:	-10 to 60°C (14 to 140°F) below 70% RH
(Meter):	193 (L) x 74 (W) x 37(H) mm
(Probe):	160 (L) x 13(D) mm/1m cable
Weight:	Approx. 430g with batteries & thermo-paper.
Accessories	Carrying case, Instruction manual, Batteries, 2 Rolls of thermo-paper, type K probe.
Printer:	Thermo-printing tape with 16 characters per line using 38mm width plain thermo-paper.

## Electrical Specifications

Humidity:	
Range:	30%RH to 95%RH
Resolution:	0.1%RH
Temperature (T1):	
Range:	-20 to 60°C (-4 to 140°F)
Resolution:	0.1°C / 0.1°F
Dew Point:	
Range:	-44.0 to 58.5°C (-47.2 to 137.3°F)

## NAME OF PARTS AND POSITION

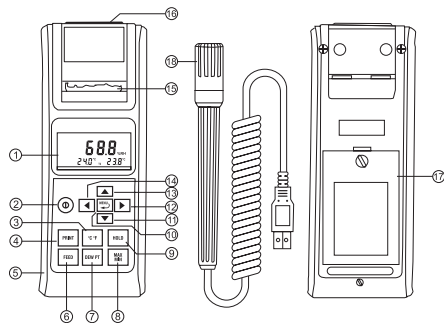

- LCD: Measured values, until, symbols, and decimal points are displayed.
- (CIRCLE): Key for power on/off
- [C/F]: Key for exchanging temperature unit °C and °F.
- [PRINT]:

① Key for start printing current data. The format as below:

LINE 1	20:12:01	02-21
LINE 2		58.9%RH
LINE 3	td	15.7°C
LINE 4	T1	24.3°C
LINE 5	T2	24.8°C

Line 1: printing time hour minute: second, month-day.  
 Line 2: printing humidity value.  
 Line 3: printing Dew point value.  
 Line 4: printing T1 temperature value.  
 Line 5: printing T2 temperature value (K-Type).

- ② Press this button for 2 seconds, the printer will enter interval printing status, and won't stop unless this button is pressed again or FEED button is pressed.

- DC 9V VAC adaptor input jack.
- [FEED] PAPER (Fig-2):

- Key for moving forward thermo-paper one line.
- Perform force stop printing, and skip any printing data.
- [DEW POINT]: Key for changing humidity in dew-point display.
- [MAX/MIN]:
  - Press this key one time to enter maximum/minimum record mode, the "REC" symbol is displayed.
  - Press this key to display the maximum reading ("MAXREC" symbol displayed), the minimum reading ("MINREC" symbol displayed) in cycle.
  - Press this key 2 seconds to exit this mode.



Fig. 2

- [HOLD]: Key for holding the display reading and press again to exit.
- [ ]: Key for start/stop set-up parameters mode.


## Parameters (in sequence):

ON/OFF	(interval printing enable or disable).
TIME INTV	(printing interval ranging from 00m:06s to 59m:59s).
INTV▶	(Interval printing start time ranging from 00h:00m to 23h:59m).
INTV■	(Interval printing stop time ranging from 00h:00m to 23h:59m).
TIME	(Calendar setting year, month, day, hour, minute).

- DOWN: Key for decreasing the value of parameters.
- RIGHT: Key for moving to the desired next parameter setting.
- UP: Key for increasing the value of parameters setting.
- LEFT: Key for moving to the desired forward

- parameter setting.
- Way out for thermo-paper.
- Type K temperature probe jack.
- Battery cabinet and cover: 6pcs 1.5V size AAA alkaline batteries.
- Humidity (including temperature) probe.

## LCD DISPLAY

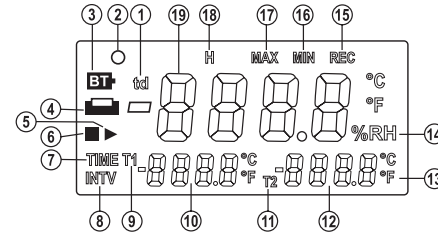

- Dew point measurement indicator.
- Preset interval printing function ON indicator.
- Low battery indicator.
- Printing indicator.
- Interval printing start time setting indicator.
- Interval printing stop time setting indicator.
- Calendar time indicator.
- Interval printing indicator.
- T1 measurement indicator.
- T1 measurement value (NTC).
- T2 measurement indicator.
- T2 measured value (Type-K).
- Temperature measurement units.
- Humidity measurement units.
- Recording indicator.
- Minimum measurement value indicator.
- Maximum measurement value indicator.
- Data hold indicator.
- Humidity and dew point temperature measured value

## PRECAUTIONS AND PREPARATIONS FOR MEASUREMENT

- Before operating this instrument, please examine it to make sure no shipping damage occurs. Otherwise notify your dealer.
- Save all packing materials until you are sure that this unit can normally operate.
- Be sure that batteries are correctly placed in the case or adaptive 9V Adaptor is in correct connection.
- An unsecured battery cover will cause error measuring.
- To avoid battery leakage problem, remove batteries if this meter will not be used for a long time.
- Do not use or store this meter outside the operating/storage environment.

## OPERATING PROCEDURE

- This meter can be supplied with batteries or DC 9V AC Adaptor. If using batteries: Remove the rear cover, and install batteries, pay attention to the polarity of battery socket. If using 9V

Adaptor, make sure that it is in good connection to the Adaptor socket of the meter. Choose the K-type temperature probe for your application and insert it into T2 the temperature probe socket. Insert Humidity/Temperature (T1) probe into T1 the meter socket.

- Press the button to power on the meter, the current date and time will display about 3 seconds. If "----" appears, it indicates no probe or the probe is broken.
- T1 indicates room temperature, T2 indicates K-type thermocouple test value.

4. Printing date:  
 Press [PRINT] one time to print one set date.  
 If need continuous printing, press and hold down PRINT button, until LCD display "INTV" mark and enter continuous interval printing mode, the printer will print data as follows:

INTV	00:06	Interval printing time, minute : second
10:55:19	08-16	Printing time, hour:minute:second, month:day
62.7	%RH	Humidity test value and unit.
td	19.8 °C	Dew point and unit
T1	27.6 °C	Room temperature test value and unit.
T2	26.5 °C	K-type thermocouple test value and unit.
10:55:25	08-16	
62.7	%RH	
td	19.8 °C	
T1	27.6 °C	
T2	26.5 °C	
10:55:31	08-16	
62.7	%RH	
td	19.8 °C	
T1	27.6 °C	
T2	26.5 °C	
10:55:37	08-16	
62.8	%RH	
td	19.8 °C	
T1	27.6 °C	
T2	26.5 °C	

Press [PRINT] or [FEED] key to exit printing mode.

- When the meter is powered on, if the printing function setting is "ON", and now time is interval printing start time, the meter will enter to continuous interval printing mode and start printing.
- Press (PRINT) or (FEED) key to exit printing mode.
- The interval printing function worked only when the start printing time is earlier than the stop printing time, and interval print time can not be longer than 24 hours.

**Caution:** Before printing, please check thermo-paper is not clipped by thermo-paper cover, if anything interrupts the printer, the meter will shut off the printer power, and symbol flickers.

## SETTING MODE

Press button to enter setting function, re-press this button can select setting parameters in circle (printer on or off, interval printing time, start printing time and calendar setting). The modifier parameter will flicker until



# WolfLabs

**Pricing on any accessories shown can be found by keying the part number into the search box on our website.**

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

**[www.wolflabs.co.uk](http://www.wolflabs.co.uk)**

**Tel : 01759 301142**

**Fax : 01759 301143**

**[sales@wolflabs.co.uk](mailto:sales@wolflabs.co.uk)**

Please contact us if this literature doesn't answer all your questions.